



- No flash.
- No zoom.
- Keep the default settings of the camera.
- Full circular image on the screen.
- Get as much natural lighting as possible.
- Avoid extreme backlighting.
- Clean the lens on both sides.
- Position yourself in the corner of the room.
- Aim straight ahead.
- Do not angle up or down.
- Keep the camera still.
- Make sure you're in focus (**green box appears**).

1 Center The Previsite Lens On The Camera.

Position the Previsite magnetic Lens on the camera's lens. The Previsite Lens should fit perfectly on the camera's lens. You should see the full circular image in the LCD monitor of your digital camera.



Previsite Lens Centered: OK



Not Centered

2 No flash

The digital camera you have received within our Previsite kit is already set up. If for some reason you lost the initial settings, please refer to the settings tutorial.

- Set up the camera on the «A» Program (**Automatic**).
- Do not change the predefined image resolution (**image size**).
- Use the default settings of the camera.
- Set up the NO FLASH mode by pressing the flash symbol button until «flash off» appears on the LCD screen.



3 No zoom

Make sure that you can see the full circular image on the LCD monitor. Zoom position to minimum.



No Zoom: OK



Zoom In Active: Not ok

4 Shooting conditions

- Make sure that you have enough light in the room. Don't hesitate to switch on all lights and/or to open the curtains to allow for more light.
- Try to always keep the biggest light source in your back.
- Avoid extreme backlighting while taking pictures.
- Clean the fisheye lens with the special cloth found in the lens box before taking pictures.

- Usually, it is best to position yourself in a corner with the windows on your side.
- Keep the camera still and make sure to aim straight ahead (**horizontal**).
- Do not angle the camera up or down.
- Don't hesitate to take many pictures in the same room from various positions. With time you will know perfectly how to position yourself in a room to get the best results.

5 Taking good pictures

To get the best pictures with any digital camera, you need to wait for the auto-focus to be done before actually taking the picture.

To do so:

1. Press gently on the release button and wait for the camera to focus. Once the center box on the screen is highlighted in green you will know you are in focus.
2. Then Press down the release button all the way, but do so only once you have seen the green box on the LCD screen which means the camera is in focus.
3. To avoid blurry pictures keep the camera still for two seconds after taking the picture.

Note that: If a red box appears on the screen while trying to auto focus, release the pressure on the button. Position yourself again (or the camera) and gently press down the release button to restart the auto-focus process. Now a green box should appear, meaning that you're ready to take the picture.

