



Pentax Optio E20 - Settings

1 Introduction

If you received your PENTAX Optio E20 from PREVISITE it is already configured and ready for use.

If you bought your PENTAX Optio E20 from a local dealer, please setup camera with the following settings.

Caution

If you are using **Windows Vista**, your **PENTAX Optio E20** may take a while before it is recognized.
the use of a **"SdCard reader"** is highly recommended.

Important Settings 2

Best results are obtained when using the **"P" program** (automatic).


Do not try to increase or reduce luminosity (EV menu) and always keep it on 0.




- Set up the camera on the **"P" Program (Automatic)**
- Set up the **NO FLASH mode** by pressing the symbol until **"flash mode"** appears on the LCD screen.
- Set up the **Zoom to its minimum Position** (Zoom Out)
- **Use the default settings of the camera**

3 PENTAX Optio E20 Default settings

While on the **"P" Program**, press the **"menu"** button and make sure you have the following settings :

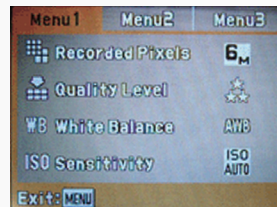

- *Recorded Pixels* : 6M
- *Quality Level* : ***(high)
- *White Balance* : AWB(Auto)
- *ISO Sensitivity* : Auto

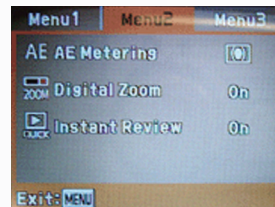

- *AE metering*: Center-weighted
- *Digital Zoom* : On
- *Instant review* : On



- *Color* : FULL
- *Sharpness* : High
- *Saturation* : Medium
- *Date Print* : Off

PREVISITE AMERICA

33 West 19th Street
Fourth Floor
New York NY 10011
Phone: 877-536-7180 (Toll Free)

PREVISITE FRANCE

40 bd Henri Sellier
92150 Suresnes
Phone: 01 46 25 75 75

PREVISITE JAPAN

Shin Yokohama Daini Center Bldg.
3-19-5 Shin Yokohama, Kohoku-ku
Yokohama 222-0033
Phone: 045-478-6041