



Caution
If you are using Windows Vista, your PVS 7030 may take a while before it is recognized.
The use of a "SdCard reader" is highly recommended.



1 No zoom

Make sure that you can see the full circular image on the LCD monitor.
Zoom position to minimum.



No Zoom: OK



Zoom In Active: No Circular Image


2 No flash

The digital camera you received within our Previsite kit is already set up.
If for some reason you lost the initial settings, please refer to the settings tutorial.

- Set up the camera on the «A» Program (Automatic).
- Do not change the predefined image resolution (image size).
- Use the default settings of the camera.
- Set up the NO FLASH mode by pressing the flash symbol button until «flash off» appears on the LCD screen.



3 PVS 730 default settings

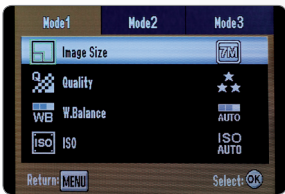

Menu 1

Image Size: 7M
Quality: ***(high)
White Balance: Auto
ISO Sensitivity: iso Auto



Menu 2

AE metering: Center-weighted
Digital Zoom: off



Menu 3

Color: FULL
Sharpness: High
Saturation: Medium
Date Print: Off



Tools menu

Go to "tools menu"
select "LCD 2" in "menu2"

